FTM-300DR Repeater memory files instructions by Robert Kocourek W9RKK

The files included with this document contain Ham Radio repeaters frequencies around the Schaumburg, IL area and a little beyond. They are intended to help you program your radio quickly and get you on the air with little fuss. This document assumes you have a programming cable (not supplied with the radio) and know how to program your radio. If you need help programming, there are videos on youtube (Search on "ftm-300dr programming") and of course there's the radio manual.

If you live around the Schaumburg area, please consider joining the Schaumburg Amateur Radio Club. www.n9rjv.org
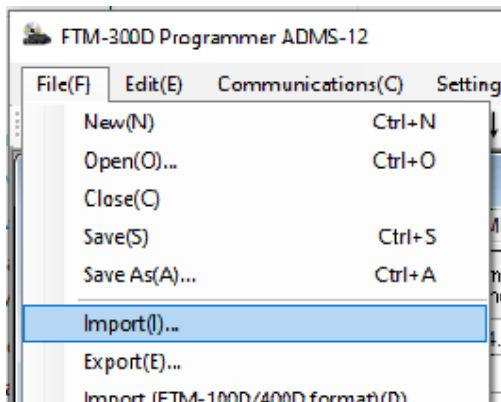
These two CSV files have identical memory channels and are intended for two different programs.

FTM300 ADMS.csv can only be imported into Yaesu's FTM-300D Programmer ADMS-12 (A free program available for download on Yaesu's website). Be aware the cable provided with the radio is for updating the firmware only. You can't program memory frequencies with it.

FTM300-RT_Systems.csv can only be imported into RT Systems FTM-300 Programmer. It's available for purchase on many Ham Radio websites. I recommend you buy it with the programming cable.
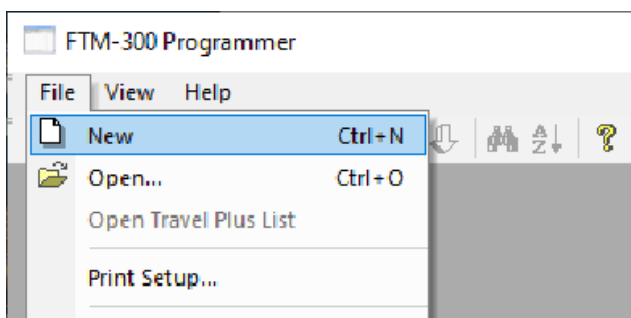
You will notice I said imported. Since the files are CSV (text), you must choose the import function in the programs. I didn't provide the binary files because they contain other information such as call sign, APRS settings, menu settings, etc.

If you're using Yaesu's program, simply click File, Import as shown below. Choose FTM300 ADMS.csv. Then send the data to the radio via a USB programming cable.
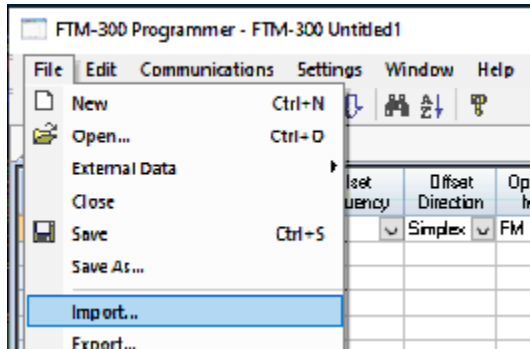

RT Systems FTM-300 Programmer is a little more involved as it's more flexible. The steps are:
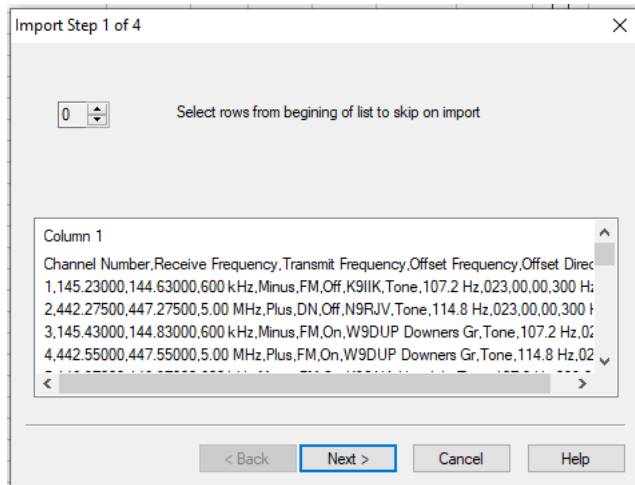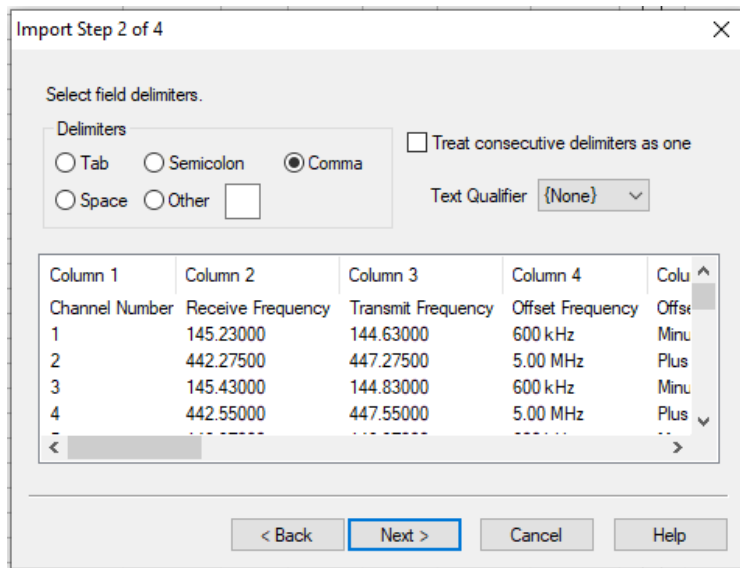
Click File, New.

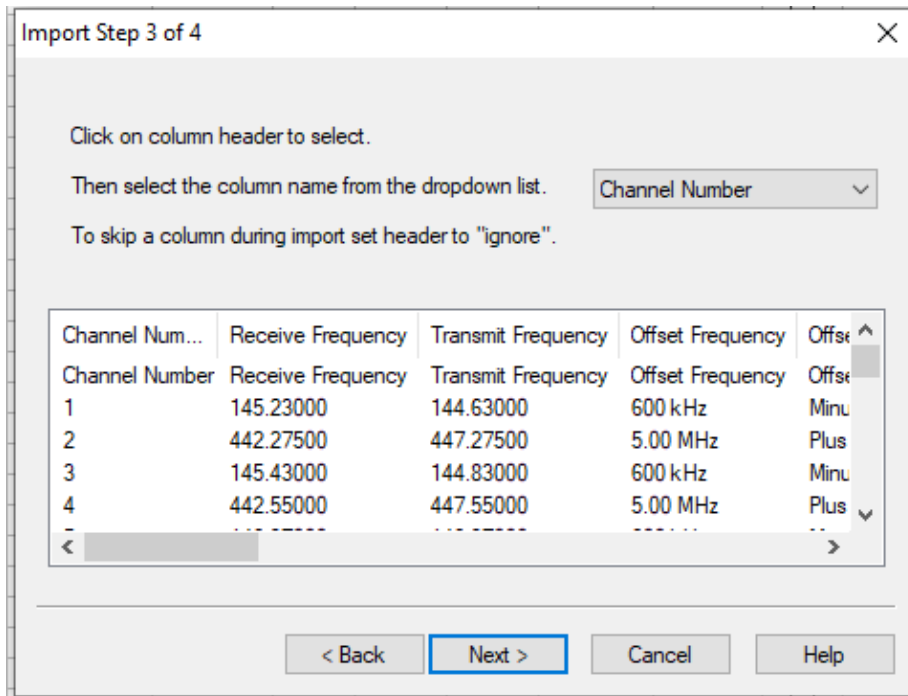Click File, Import. Choose FTM300-RT_Systems.csv and click open.

The Import dialog box will open. Click Next.

Click Next again.
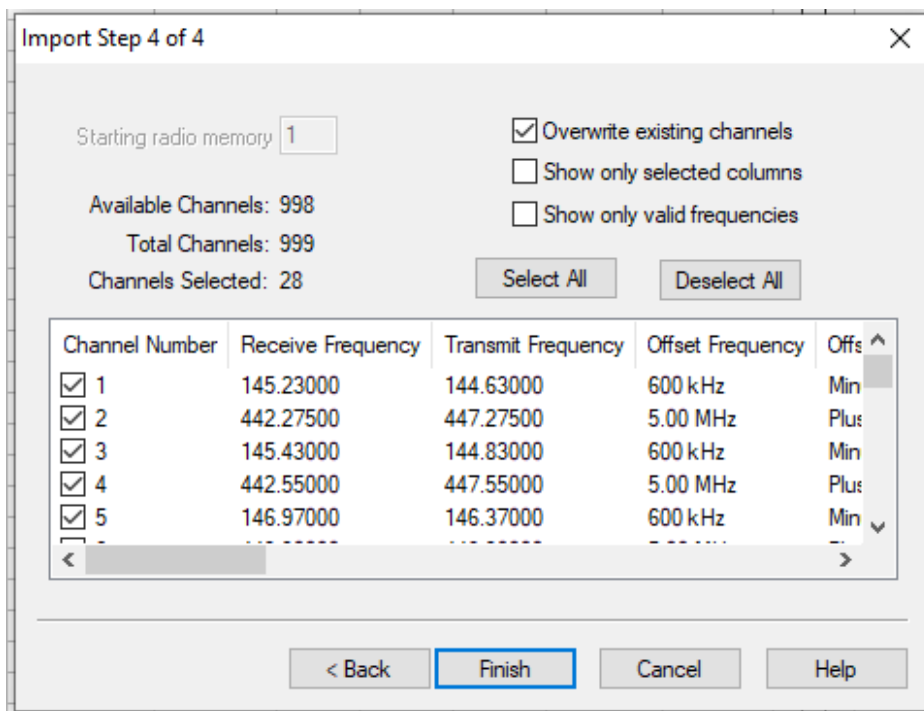

Select **Channel Number** from the drop down and click Next.

Click on column header to select.

Then select the column name from the dropdown list. | Channel Number ⌄ |

To skip a column during import set header to "ignore".

Channel Num...	Receive Frequency	Transmit Frequency	Offset Frequency	Offse
Channel Number	Receive Frequency	Transmit Frequency	Offset Frequency	Offse
1	145.23000	144.63000	600 kHz	Minu
2	442.27500	447.27500	5.00 MHz	Plus
3	145.43000	144.83000	600 kHz	Minu
4	442.55000	447.55000	5.00 MHz	Plus

[< Back] [Next >] [Cancel] [Help]

Finally click Finish.

Starting radio memory 1

☑ Overwrite existing channels
☐ Show only selected columns

Available Channels: 998
☐ Show only valid frequencies

Total Channels: 999

Channels Selected: 28 [Select All] [Deselect All]

Channel Number	Receive Frequency	Transmit Frequency	Offset Frequency	Offs
☑ 1	145.23000	144.63000	600 kHz	Min
☑ 2	442.27500	447.27500	5.00 MHz	Plus
☑ 3	145.43000	144.83000	600 kHz	Min
☑ 4	442.55000	447.55000	5.00 MHz	Plus
☑ 5	146.97000	146.37000	600 kHz	Min

[< Back] [Finish] [Cancel] [Help]

You can now make changes and save to disk or send the data to the radio.